

Refill card stacker

1. Remove cards from the recycle bin

- Remove new cards from the **recycle bin** and prepare them for loading.
 - Make sure the cards are **aligned and clean**.
-

2. Remove the card stacker box

- Locate the **release switch** on the **side of the card stacker box**.
 - Pull the release switch.
 - **Lift the box upward** to remove it from the stacker.
-

3. Load cards into the box

- Inside the box, locate the **metal spring-loaded slider** (card pressure plate).
- **Lift the metal slider upward**.
- Place the cards **under the slider**, making sure they are stacked evenly.
- Slowly release the slider so it rests **on top of the cards**, applying pressure.

“ ⚠ Important: The metal slider must always be on top of the cards to ensure proper feeding.

4. Reinsert the box into the stacker

- Insert the box back into the card stacker.
 - **Check the direction label** on the top of the box and ensure it is oriented correctly.
 - Push the box down until it **locks firmly into place**.
-

5. Final check

- Gently pull on the box to confirm it is **securely locked**.
- The card stacker is now ready for operation.

<https://www.youtube.com/embed/GVcPQv2nRV0>

Revision #1

Created 21 January 2026 18:49:38 by Admin

Updated 21 January 2026 18:55:14 by Admin