

# Replacing the Timer Battery in the Kiosk

## Required Tools

- **Screwdriver**
  - **Wrench or socket tool** (for loosening the nuts, size depends on model)
  - **4 × AA batteries** (new)
- 

## 1. Disconnect power

- **Unplug the kiosk** from the power outlet to ensure it is completely powered off.
- 

## 2. Remove the cover

- Use a **wrench or socket tool** to loosen and remove the **4 nuts**.
  - Remove the cover carefully.
- 

## 3. Loosen the timer (if required)

- If the timer is mounted tightly:
    - Slightly loosen the **2 nuts** on the left and right side of the timer using the wrench or socket tool.
    - Do **not** remove them completely.
- 

## 4. Remove the timer from the DIN rail

- On the **bottom side** of the timer, locate the **red release knob / lever**.
- Use a screwdriver to **push it downward**.

- Pull the timer **forward** to remove it from the DIN rail.
- 

## 5. Replace the batteries

- On the **back side** of the timer:
    - Replace the **4 AA batteries**.
    - Make sure the **polarity (+ / -)** is correct.
- 

## 6. Reinstall the timer

- Mount the timer back onto the DIN rail and press it firmly into place.
  - Tighten the previously loosened nuts using the wrench or socket tool.
- 

## 7. Check connections

- **Before reinstalling the cover:**
    - Check all **connectors and terminals**.
    - If any connectors are loose, gently tighten them with a screwdriver.
- 

## 8. Reinstall the cover

- Put the cover back on and secure it with the **4 nuts**.
- 

## 9. Power on and set mode

- Plug the kiosk back into the power outlet.
  - Set the timer switch from **AUTO / MANU** to **ON**.
- 

Revision #2

Created 21 January 2026 18:47:53 by Admin

Updated 21 January 2026 18:48:41 by Admin