

# Passport Reader Integration

"passport\_reader\_uv": true,  
"passport\_reader\_ir": true,  
"passport\_authentication": true,

# Passport Reader Authentication


To activate the authentication feature with Assure Id, you need to set following configuration

"passport\_reader\_uv": true,


"passport\_reader\_ir": true,

"passport\_authentication": true,


[https://drive.google.com/drive/folders/1EU\\_DoR-2Mjub9eWgm-omcPZIqcF0o64M?usp=sharing](https://drive.google.com/drive/folders/1EU_DoR-2Mjub9eWgm-omcPZIqcF0o64M?usp=sharing)

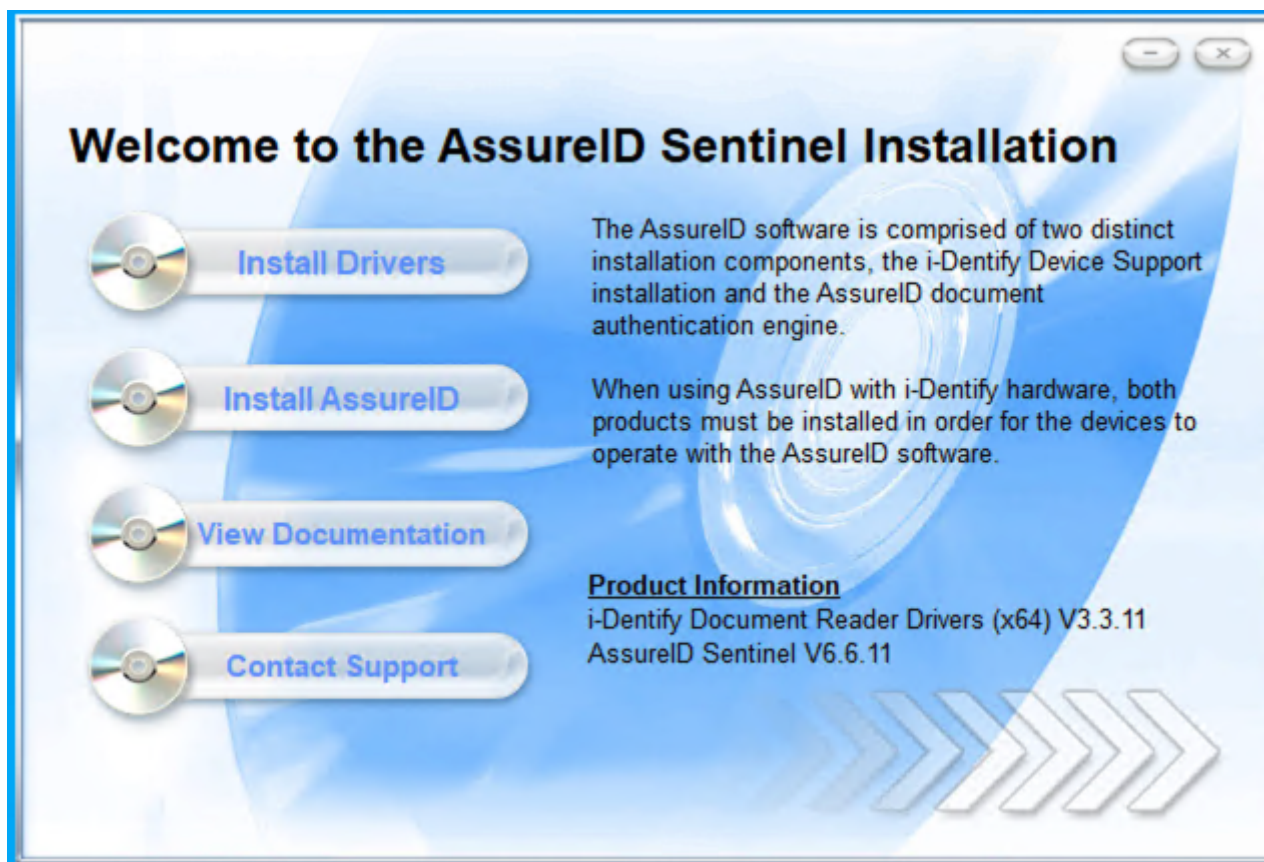


Enter your license code

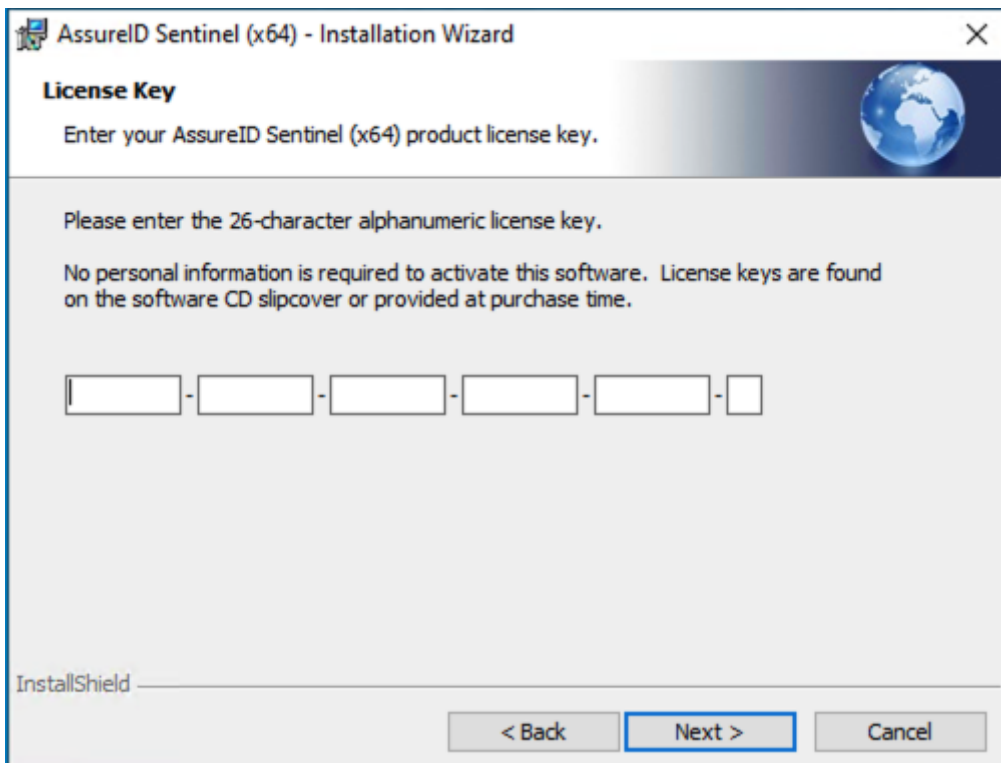


Select the option to install "Complete"

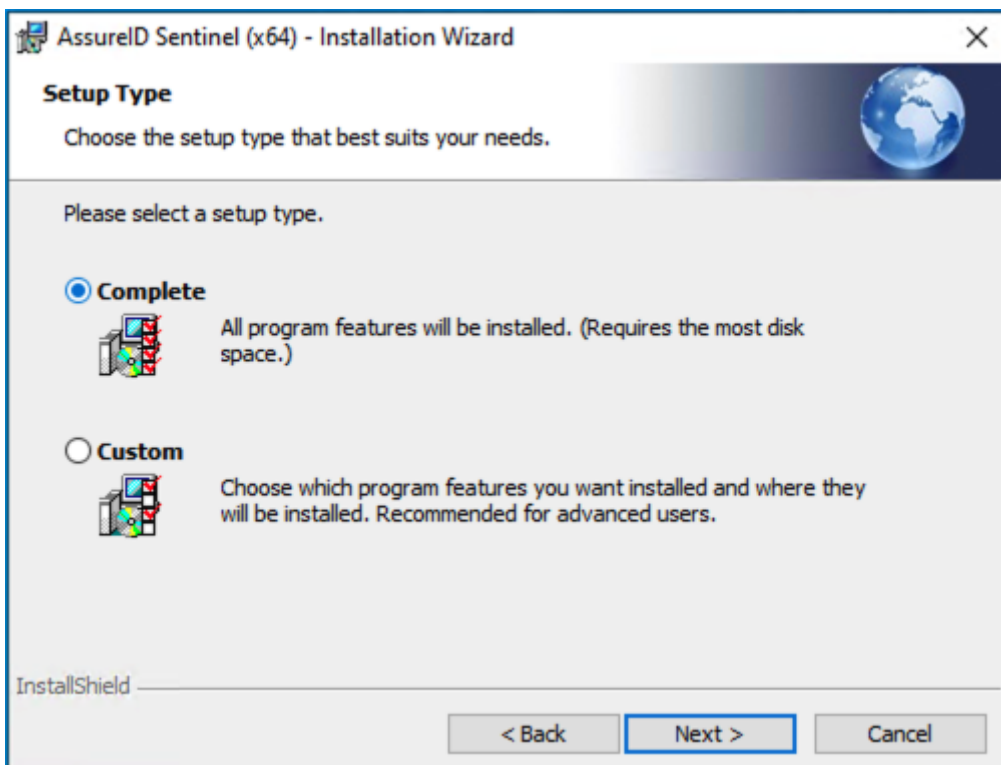

Activate your license with the AssureID License Activation

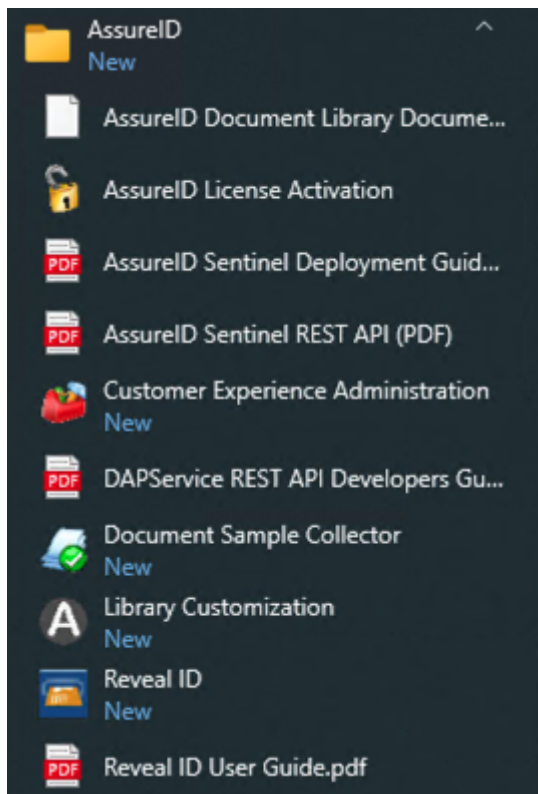

AssureID License Activator

—

□

×

## Welcome to AssureID Sentinel™ License Activation

The AssureID software has not been activated.

The AssureID software requires a license key in order to operate.

You do not need to provide your name or other personal information when you activate this software. Please enter the 26 alpha-numeric license key provided at purchase time.

License Key

Change

Activation Method

☒ Automatic

☒ Internet

☐ License server

Verify

☐ Manual

☒ Create a license activation request file

☐ Install an activated license file

Activate License

Revision #2

Created 23 January 2025 17:29:56 by Admin

Updated 23 January 2025 18:00:38 by Admin