Setting Up the Kiosk

⚠ Important Safety Notice (Before Setup)

- **The transport wheels must be removed before operating the kiosk.**
  The wheels are for transportation only and must not be used during normal operation.

Power Connection

- On the **lower back side** of the kiosk, you will find a **small access door**.
- Behind this door are:
  - Power plug
  - Ethernet input
  - Power switch
- Connect the **power cable** to the kiosk.
- Turn the **power switch** to ON.

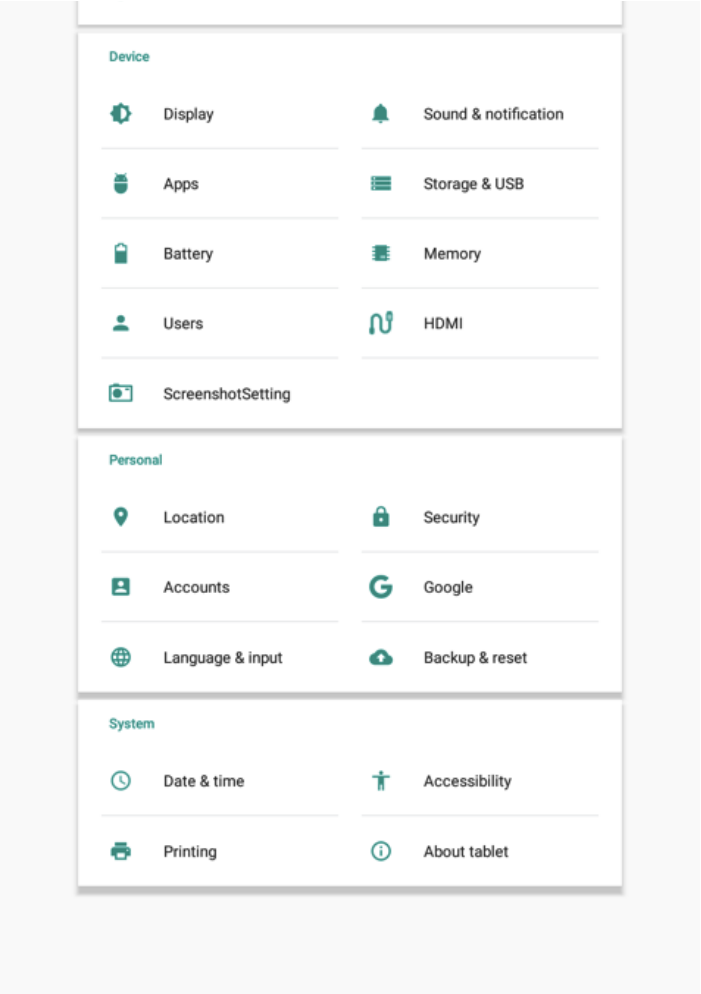
Network Connection

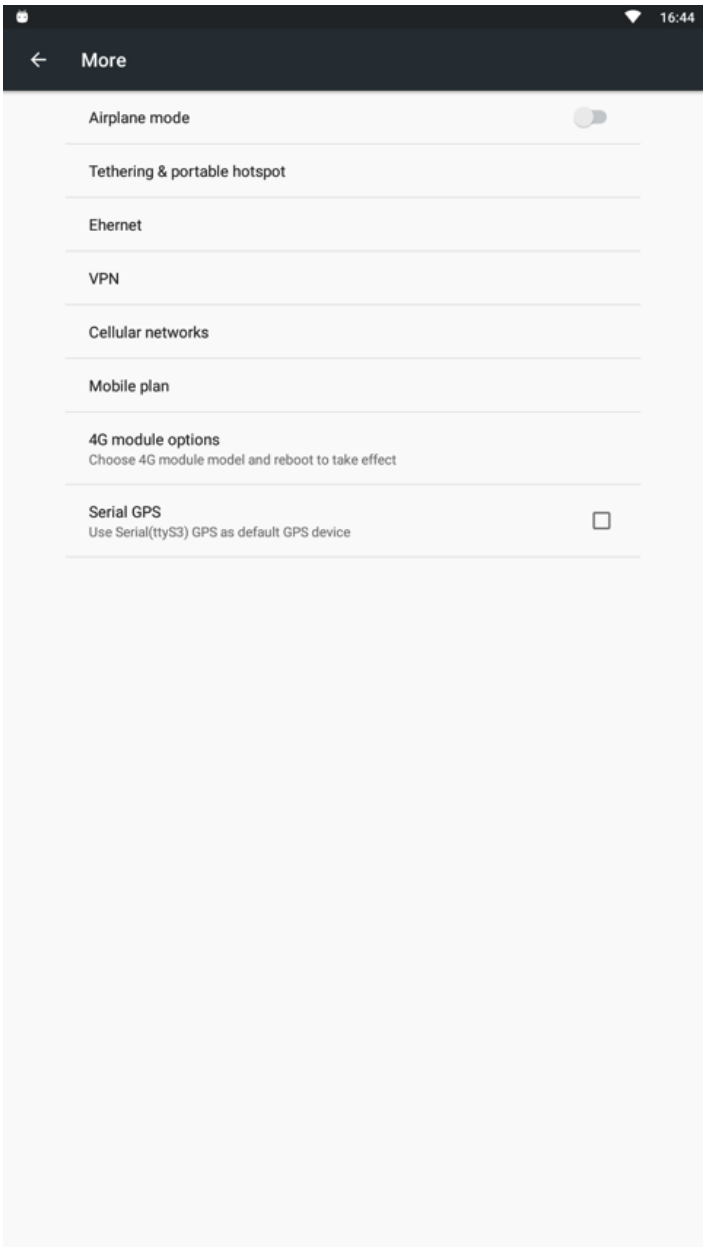
We strongly recommend using a **wired Ethernet connection** for best reliability.

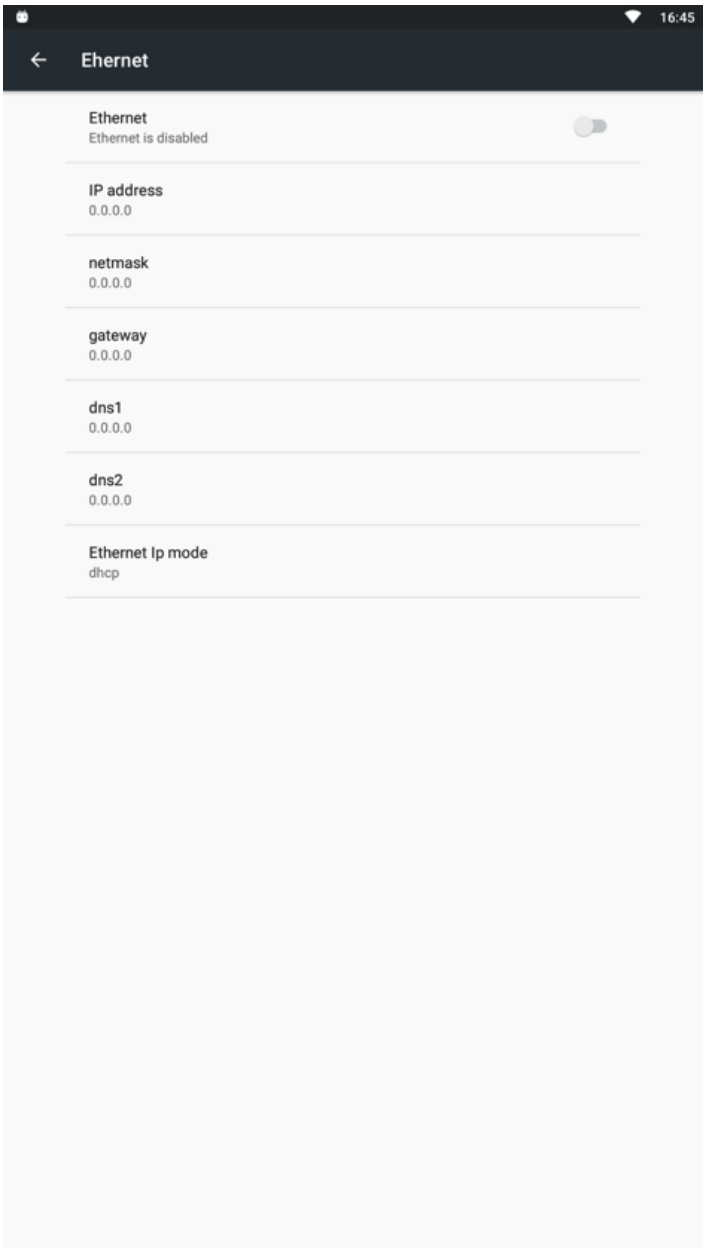
Ethernet Connection (Recommended)

1. On the **lower back side** of the kiosk, connect the **Ethernet cable** to the Ethernet port.
2. Configure the network settings on the kiosk:
   - Go to **Settings → More → Ethernet**
3. Activate the Ethernet connection.
4. Configure your **network-specific settings** (e.g. DHCP or static IP).

Recommendation:
If you are using a wired Ethernet connection, we recommend **disabling Wi-Fi**.


Device
Display
Sound & notification
Apps
Storage & USB
Battery
Memory
Users
HDMI
ScreenshotSetting
Personal
Location
Security
Accounts
Google
Language & input
Backup & reset
System
Date & time
Accessibility
Printing
About tablet


16:44
More
Airplane mode
Tethering & portable hotspot
Ehernet
VPN
Cellular networks
Mobile plan
4G module options
Choose 4G module model and reboot to take effect
Serial GPS
Use Serial(ttyS3) GPS as default GPS device



Wi-Fi Connection (Optional)

If Ethernet is not available, Wi-Fi can be used.

1. Go to **Settings → Wi-Fi**
2. Enable **Wi-Fi**
3. Select the Wi-Fi network you want to connect to
4. Enter the password if required
5. Verify that the Wi-Fi connection is successfully established

---

Revision #2
Created 21 January 2026 18:56:38 by Admin
Updated 21 January 2026 19:05:02 by Admin