Passport Reader Integration

"passport_reader_uv": true,
"passport_reader_ir": true,
"passport_authentication": true,

Passport Reader Authentication


To activate the authentication feature with Assure Id, you need to set following configuration

"passport_reader_uv": true,


"passport_reader_ir": true,

"passport_authentication": true,


https://drive.google.com/drive/folders/1EU_DoR-2Mjub9eWgm-omcPZIqcF0o64M?usp=sharing

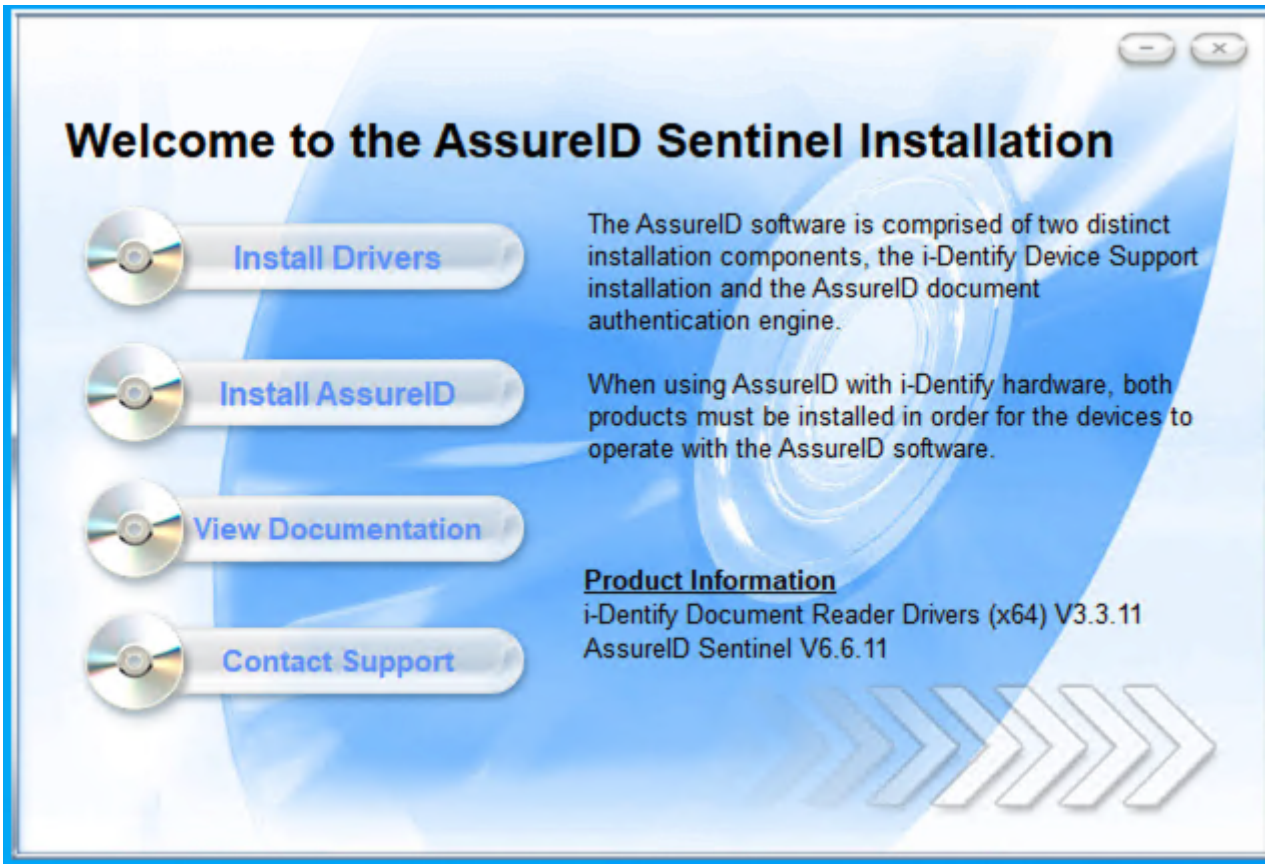


Enter your license code

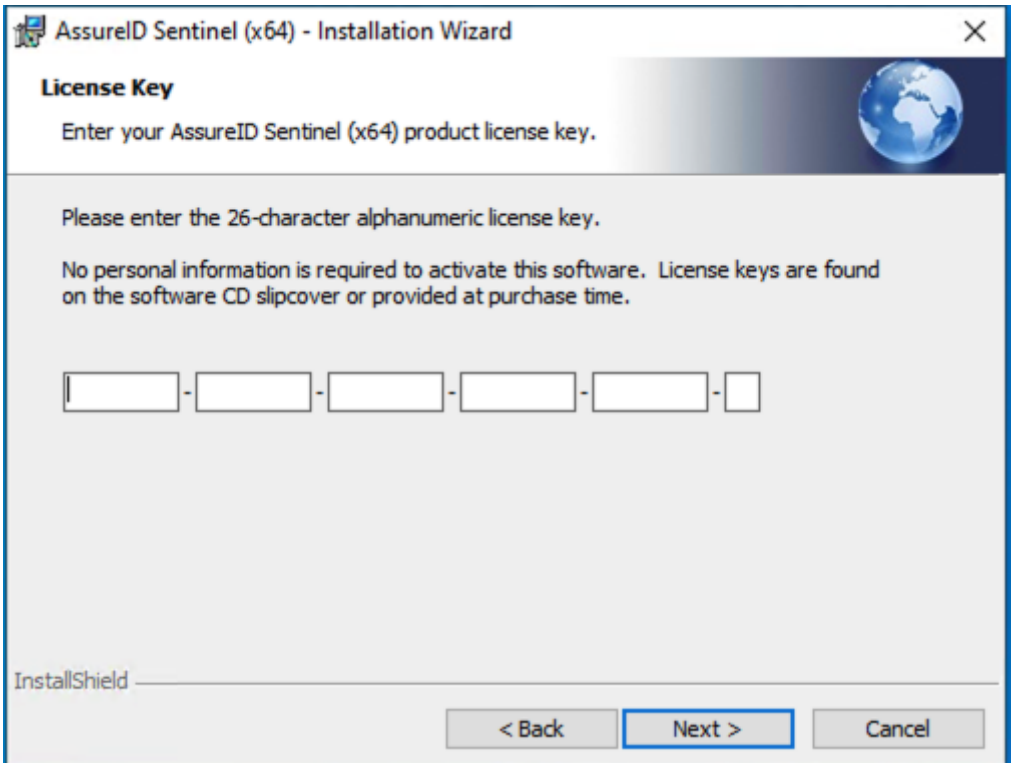


Select the option to install "Complete"

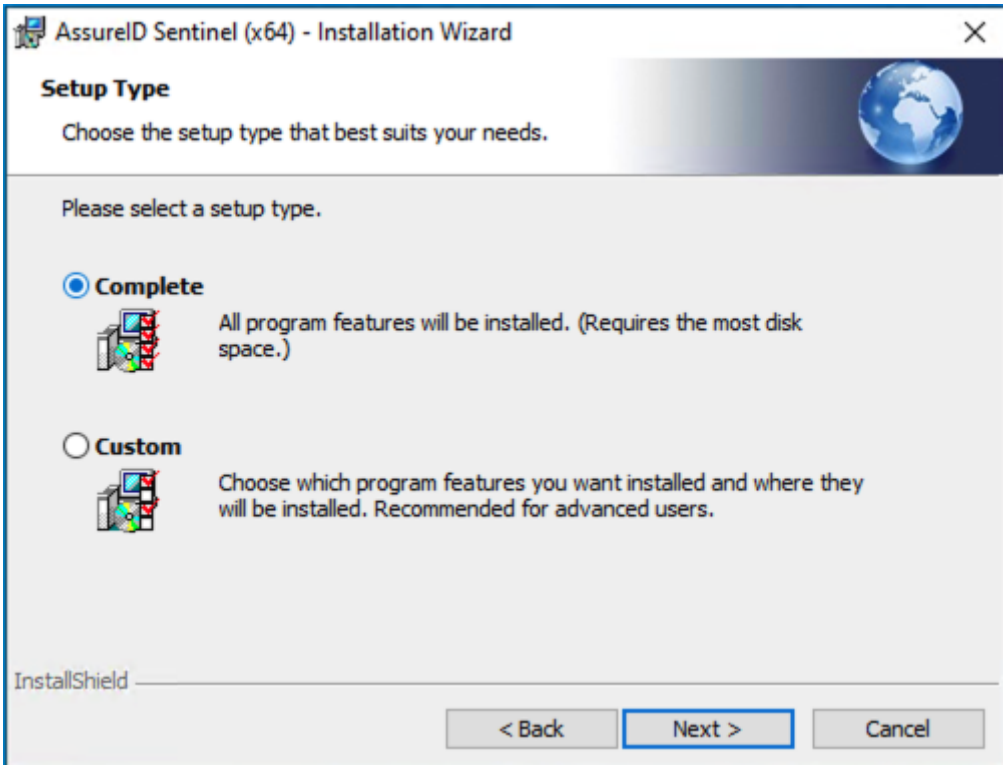

Activate your license with the AssurreID License Activation

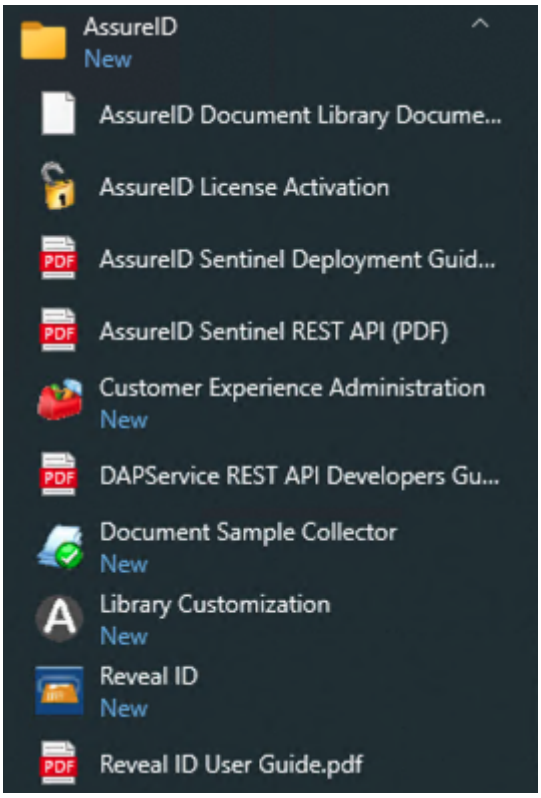
AssureID
New
AssureID Document Library Docume...
AssureID License Activation
AssureID Sentinel Deployment Guid...
AssureID Sentinel REST API (PDF)
Customer Experience Administration
New
DAPService REST API Developers Gu...
Document Sample Collector
New
Library Customization
New
Reveal ID
New
Reveal ID User Guide.pdf

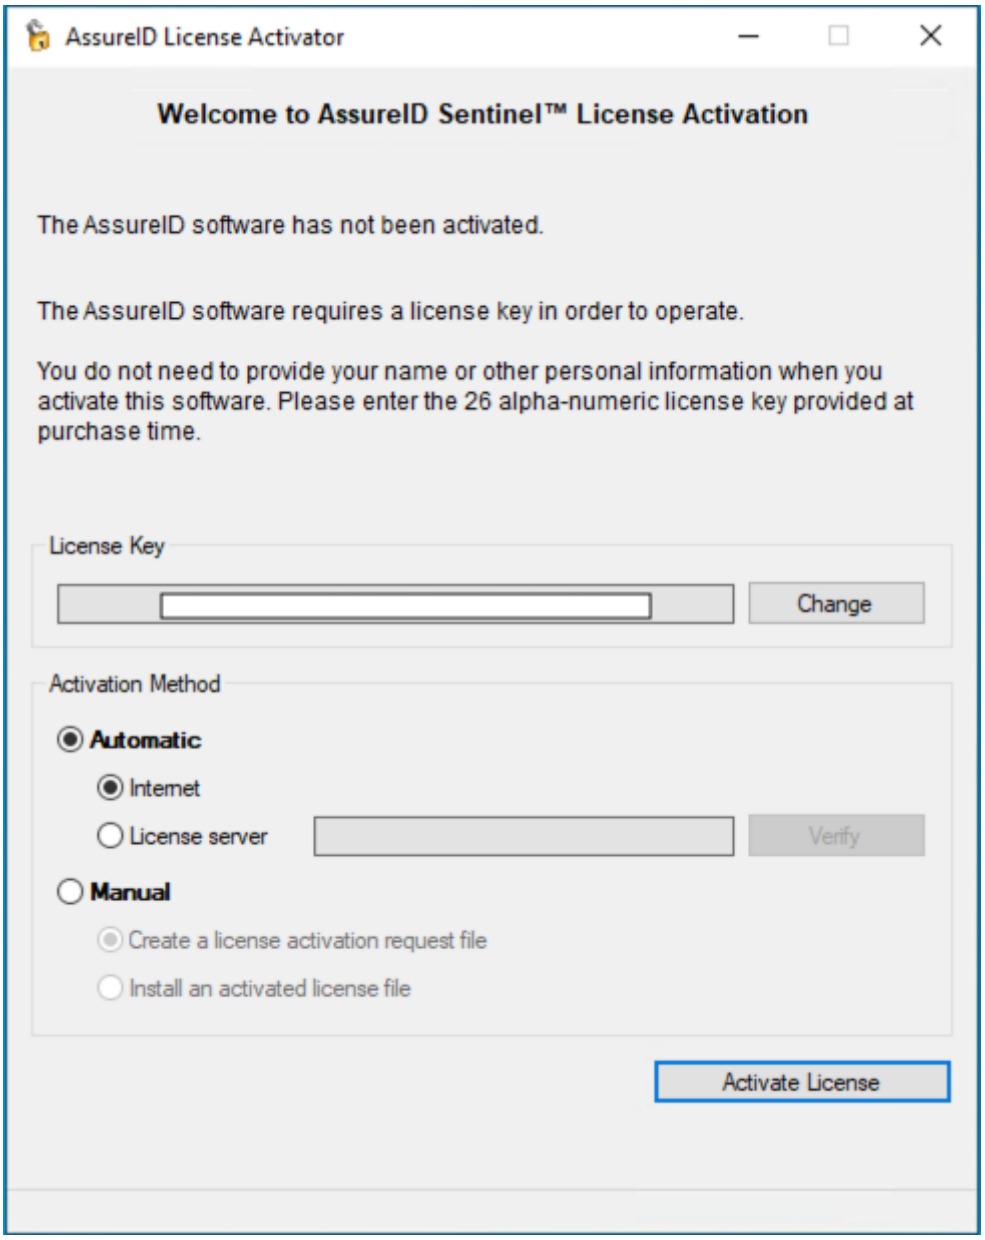

Revision #2
Created 23 January 2025 17:29:56 by Admin
Updated 23 January 2025 18:00:38 by Admin